



LEGEND

- RWY CL lights
- TDZ lights

ARP 553254N 0132112E

AD ELEV 237 FEET

LEGEND See GEN 2.3

Dimensions in m, ELEV in ft

Docking system type Stands Number

Safegate	20
APIS	1- 8

Parking procedures

Unless otherwise requested aircraft will normally be guided to nose-in parking. Pilot in command must ensure that towbar for push-back is available before accepting this parking procedure.

At parking stand No 1-8

Centre line and stopping guidance are provided from a display unit mounted at the extension of the stand centre line.

- Intercept the centre line and follow the azimuth guidance display.
- Check correct aircraft type/series on the APIS display.
- Abort docking if display shows STOP or wrong aircraft type/series.
- At STOP position the red lights are lit and display indicates STOP, and the centre line beacon is switched off. If correctly parked « OK » shows on the display.
- If coming to far the display indicates « TOO FAR ». The safety area is passed and push-back may be necessary.

ACL/INS Coordinates for Aircraft Stands			
APRON Surface Bearing strength	NR	COORD	ELEV
N CONC+ASPH PCN 70 F/B/X/T	A	553229.57N 0132159.89E	222
	B	553230.01N 0132206.64E	223
S CONC+ASPH PCN 70 F/B/X/T	C	553221.58N 0132201.54E	221
	D	553222.23N 0132211.34E	223
HA ASPH		553204.80N 0132209.46E	225
HB ASPH		553203.88N 0132201.75E	222
JA ASPH		553203.36N 0132155.40E	219
JB ASPH		553204.45N 0132152.93E	218
Compass Base		553201.99N 0132219.79E	231