



VISUAL APPROACH CHART - ICAO



AD ELEV 62 FEET
 ELEV and ALT in ft
 HGT in ft above AD ELEV
TA 5000 AMSL

ÄNGELHOLM TOWER 127.105
ÄNGELHOLM CONTROL 132.455

AD 2 ESTA 6-1
ÄNGELHOLM SWEDEN

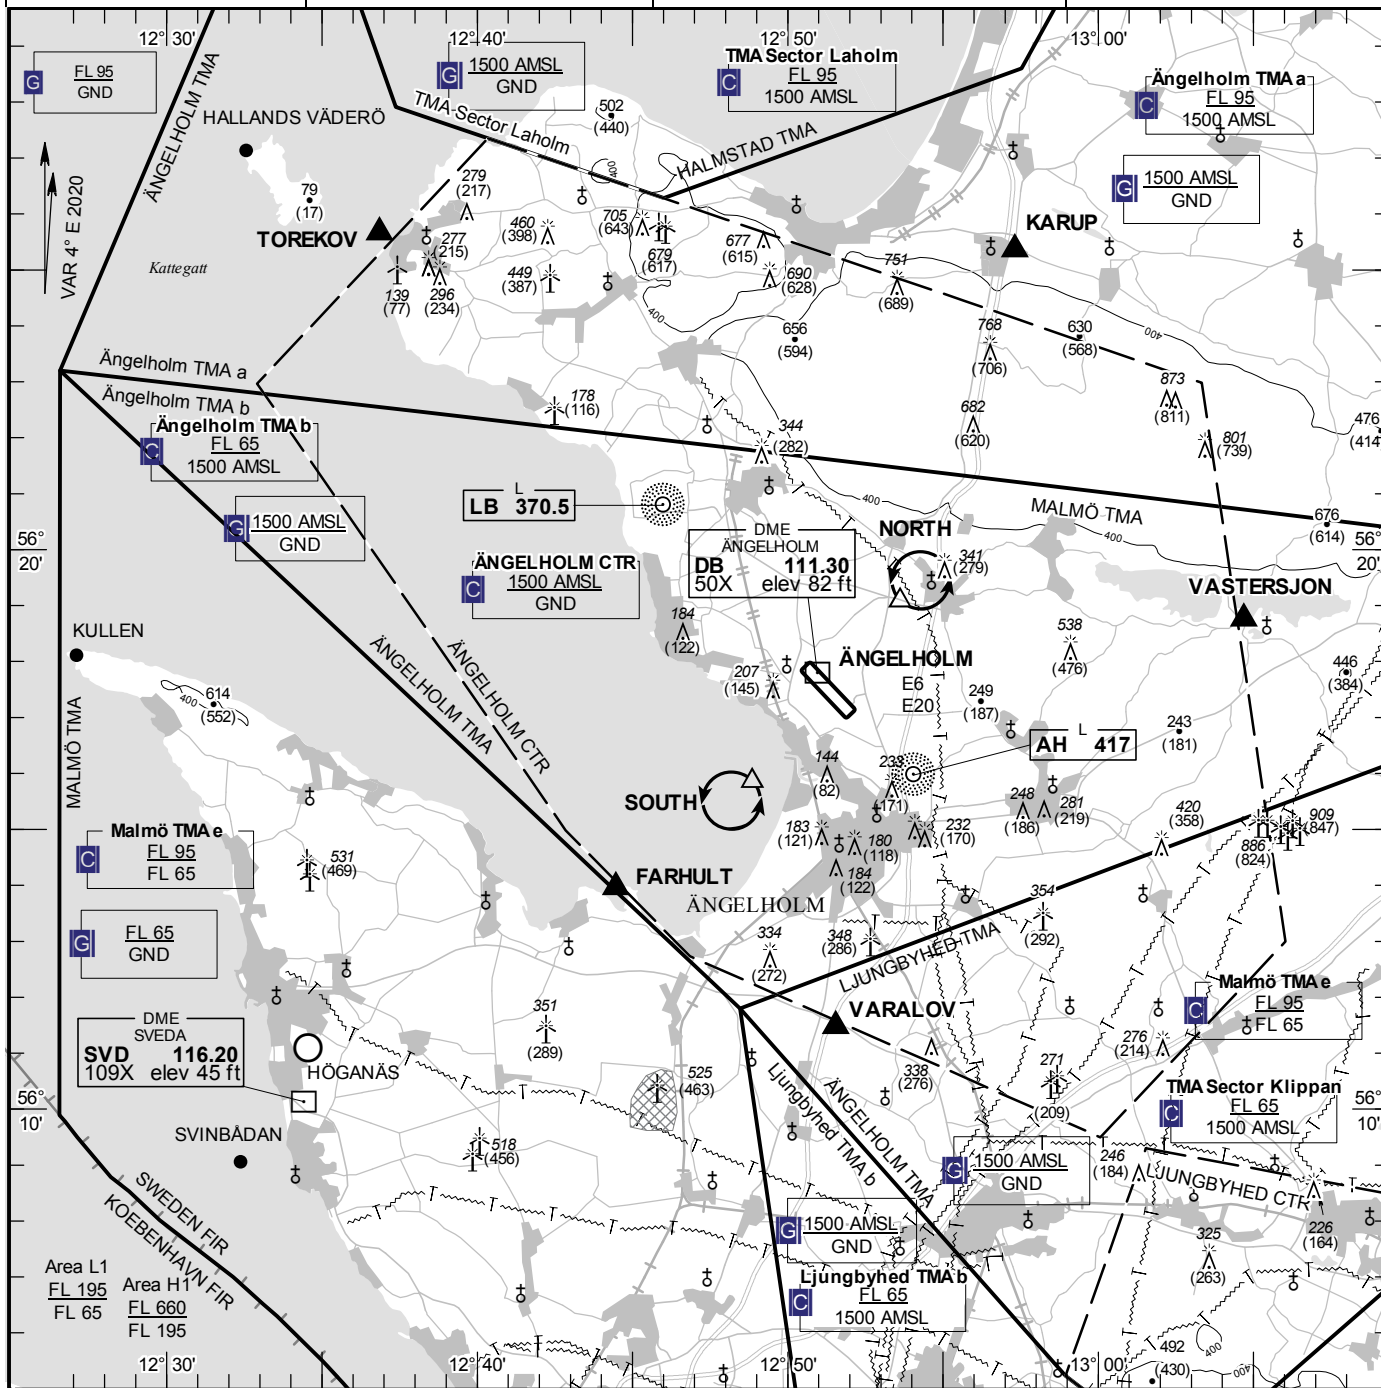

Communication failure

- 1 SQUAWK 7600
- 2 Enter CTR via FARHULT – Holding SOUTH at or below 1500 ft AMSL to traffic circuit. Transmit blind your intentions.
- 3 Flash LDG-lights and watch TWR for optical signals.

RWY NR	THR ELEV	PAPI (MEHT)
14	60.2 ft	Left/3.00° (37 ft)
32	50 ft	Left/3.00° (54 ft)

Entry / exit point

TOREKOV	562539N 0123651E
KARUP	562521N 0125719E
VASTERSJON	561845N 0130441E
VARALOV	561128N 0125133E
FARHULT	561357N 0124428E

Remark

Right hand traffic circuit when RWY 32 is in use.

Sector LAHOLM and sector KLIPPAN:
 ATC provider, see ENR 2.1

Legend
 See GEN 2.3

Holding

NORTH: Hold at Hjarnarp church, north east of point 561903N 0125338E
SOUTH: Hold west camping ground, south west of point 561550N 0124851E